

Exploded views

In order to operate, follow the order outlined here. Each assembly corresponds to a D/R procedure in the maintenance instructions and the necessary repair kit(s).



Spare screws and fasteners

Order G03581 (KR screws LS10) for spares.

