

## Exploded view

In order to operate, follow the order outlined here. Each assembly refers to the corresponding Disassembly/Reassembly (D/R) procedure in the maintenance instructions and the necessary repair kit.

**i** **Screws and fasteners**  
For **each** assembly indicated by a ◇: order G03452 (KR screws and fasteners X4i) in addition to the repair kit(s).

