

Exploded views

In order to operate, follow the order outlined here. Each assembly refers to the corresponding Disassembly/Reassembly (D/R) procedure in the maintenance instructions and the necessary repair kit.

i Screws and fasteners

For **each** assembly indicated by a \diamond : order **G03686** (KR screws and fasteners SB10i) in addition to the repair kit(s).

