

## Exploded views

In order to operate, follow the order outlined here. Each assembly refers to the corresponding Disassembly/Reassembly (D/R) procedure in the maintenance instructions and the necessary repair kit.

- i** **Screws and fasteners**
- For **each** assembly indicated by a ♦: order G03350 (KR screws and fasteners Syva Low/Sub) in addition to the repair kit(s).
- For **each** assembly indicated by a ♦: order G03349 (KR gaskets Syva Low/Sub) in addition to the repair kit(s).

